



HOW TO INSTALL WOOD CORNICES

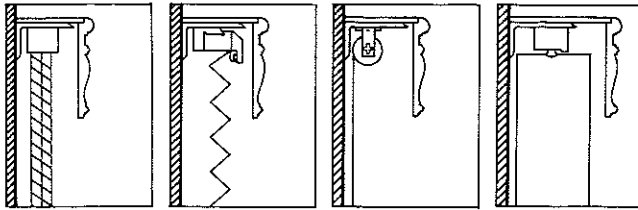


INSTALL UNDERTREATMENT

Wood cornices are an elegant top treatment for mini and wood blinds, pleated and roller shades, and vertical blinds.

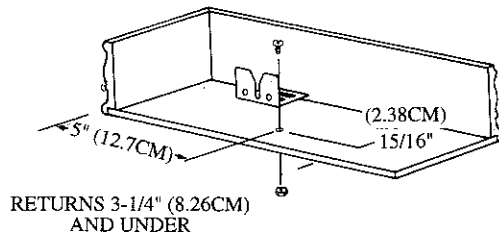

RETURNS 3-1/4" (8.26CM)
AND UNDER

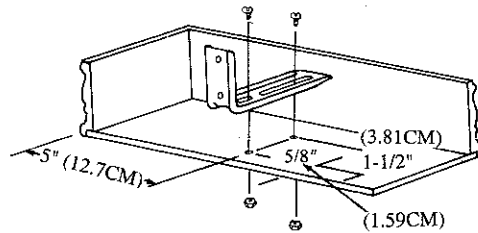

RETURNS OVER 3-1/4" (8.26CM)




ASSEMBLE CORNICE

Mark bracket hole locations on the dust cover 5" (12.70cm) in from each end. The back of the bracket should be flush with dust cover. If included, mark third bracket hole 1 1/2" (3.81cm) to the left of center to miss center bracket. Drill a 3/16" (4.92mm) diameter hole through dust cover at each bracket location. Attach brackets to dust cover at each location with nut and screw.

INSTALL CORNICE

Returns 3 1/4" (8.26cm) and under

Hold cornice in desired position and mark at slots in brackets. Use hollow wall anchors if wall studs cannot be found. Insert 1 1/4" (3.18cm) screws at these marks letting the heads protrude approximately 1/8" (3.18mm). Slide slots in brackets over screw heads as shown.

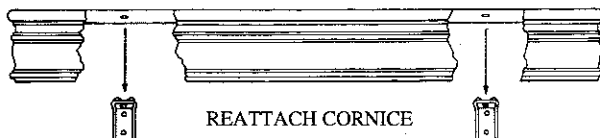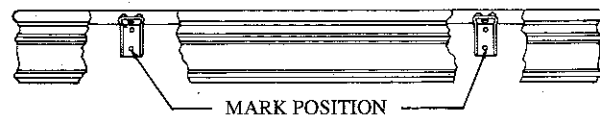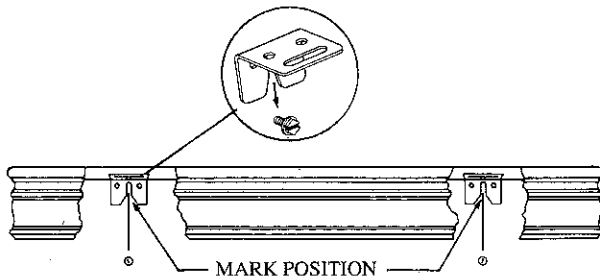

Returns over 3 1/4" (8.26cm)

Hold cornice in desired position and mark center of bracket holes. Use hollow wall anchors if wall studs cannot be found. Remove brackets from cornice. Mount brackets with 1 1/4" (3.18cm) screws. Reattach cornice to brackets.