

# Woven Wood/Natural Shades - Specialty Shades

## Installation Instructions



Questions? We can help! Call Vista's Hot Line for quick assistance. 1-800-726-3380  
 If you are missing parts or have questions about the operation of your blind, call our Hotline. Please have the Vista order number available, it can be found printed on a sticker affixed to the headrail or shipping label.

To install your Vista blinds, you will need a few basic tools: pencil, drill and drill bits, measuring tape, and screwdriver. Before you begin, please read the instructions all the way through to acquaint yourself with the recommended procedures.


If you are installing into a hollow wall, you'll need to purchase the appropriate hollow wall anchors. Seek the advice of an expert at your local hardware store.

### Nature Rail Installation

Position brackets at least three inches from each end of the shade. For wider shades, one or more center brackets are required and should be positioned equally between the end brackets.


#### Inside Mount Installation:

1. Screw swivel bracket to ceiling or window frame surface.
2. Position headrail under bracket and push to the top with swivel tab to the rear.
3. Rotate swivel tab to lock in headrail.

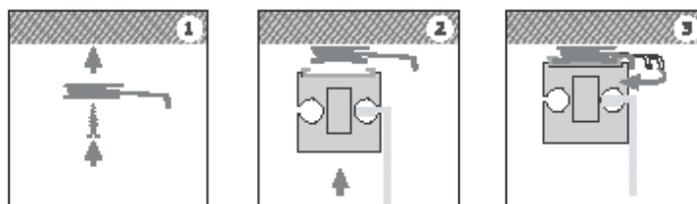

#### Outside Mount Installation:

1. Screw wall bracket to flat surface.
2. Attach swivel bracket to the wall bracket with nut and bolt.
3. Push headrail flush to the top of the bracket with swivel tab to the rear.
4. Rotate swivel tab to lock in headrail.

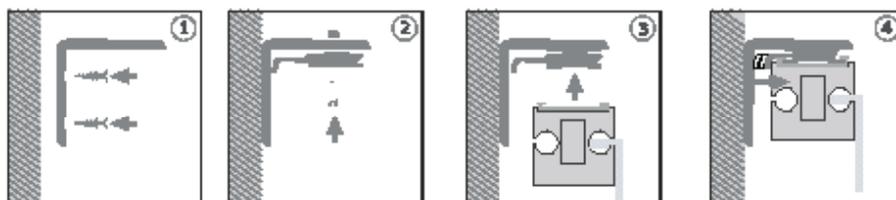

### Woven Wood Arch - Inside Mount Installation Only



Woven Wood arches are installed using velcro. Velcro® rectangles will be affixed to the back of the woven wood arch. The face of the arch mounting brackets are covered with velcro.

The flat surface of the window casement must be at least 1 1/2" deep to attach installation brackets. Minimum flush mount will vary from 1 5/8" to 2 1/4" depending on the pattern thickness.

Arch brackets are designed to hold the arch in the window opening. You have been supplied with the necessary quantity of brackets to accommodate your particular arch.

Arch Width	# of Clips
24" - 49"	3
50" - 72"	5

1. Position the first arch bracket at the top center of the arch opening and install with the screw(s) provided.
2. While holding the arch in place, determine the position of the additional velcro rectangles on the back of the arch and mark the window with the location for the additional brackets.
3. Install the remaining brackets at the same depth as the center one. Position the arch so that the Velcro on the back of the arch lines up with the arch brackets. Once in place, press the Velcro together to create a bond.

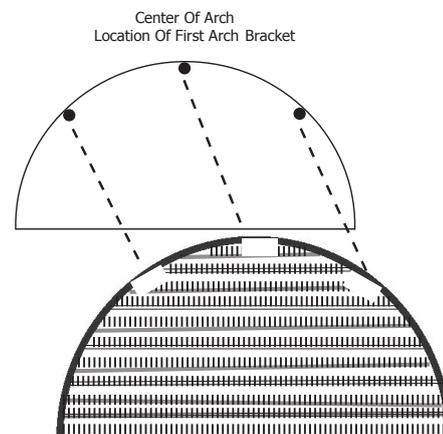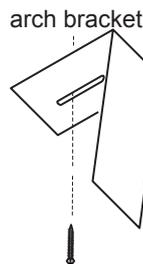

### ARCHTOP

The height of the arch is extended 6" to allow the shade to be installed behind the arch. When ordering a shade with an archtop, the shade should not come with a valance, as the archtop will serve as the valance.

Have questions? Call our hotline at 1-800-726-3380

For some quick tips on installing or troubleshooting your shade, visit us at <http://www.youtube.com/user/VistaProducts>

# Woven Wood/Natural Shades - Specialty Shades

## Installation Instructions




### Woven Wood Folding Panel

#### Inside Mount

Inside mount folding panels require approximately 2 3/4" of depth for proper installation and operation. Mounting clips should be mounted approximately 3" from each end of the headrail. Space additional brackets evenly between the two end brackets.

**If you ordered a woven wood valance with your inside mount folding panel, it is installed first.**

Install the valance board inside the window opening, and screw up through the board into the top of the window frame or ceiling. It is okay if the front of the valance projects out from the opening. Attach the inside mounting clip to the underside of the valance board using 3/4" screw provided. It should be positioned so that the rail will be in the center of the board.

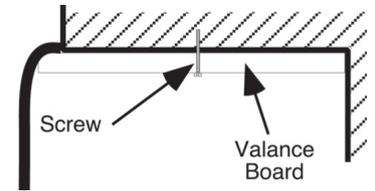

#### Bracket Placement

Hold the track in the window opening leaving a minimum 2 1/2" clearance behind the track. Make a pencil mark directly behind the track approximately 3" from each end of the track. Secure the mounting clips in place using screws provided. Space additional brackets evenly between the end brackets.

#### Inside Mount with Crown Valance:

Line up the back of the valance with the front section of the mounting clip (see diagram right). Screw the valance clip to the top of the window frame/ceiling using the back hole.

Once the track and panel are installed the valance snaps into the valance clips.

**Note: Panel carrier wheels must be inserted in to track before track installation.**


Remove headrail endcap from only one end of the track. From the open end of the track, slide the carrier wheels into the track.

Be careful to ensure that the spacer chain has no kinks and that the chain connectors are on opposite sides of the ring on either side of the carrier wheel.



Once all the carriers are in the track, re-attach the headrail endcap. On the stack end of the track, tighten the "stop" screw in to place in the top of the headrail.

Install the track into the spring loaded brackets. Once the track is in place, tighten the set screw in the bracket to lock in place.

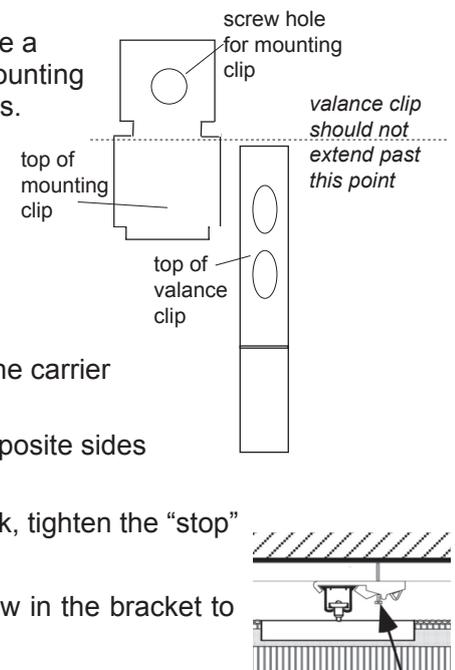


#### Outside Mount

Firmly attach the wall bracket to the wall. The two end brackets should be placed 3" from the end of the track. Space additional brackets evenly between the two end brackets. Fasten wall bracket to the wall with fasteners suited for secure installation to your particular wall type. A screw put into plain drywall or plaster will not provide a lasting installation. Loosen the set screw and extend the arm of the bracket to allow a minimum 2 1/2" clearance.

Use a level to ensure that the brackets are level and aligned.


Install the track into the spring loaded brackets. Once the track is in place, tighten the set screw in the bracket to lock in place.

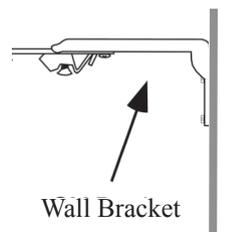

#### Outside Mount with Crown Valance:

Attach valance clip to the wall bracket. Using the nut & bolt provided connect the clip to the slotted wall bracket. Slide the nut & bolt all the way forward and slide the valance clip back to the front of the rear slot.

Once the track and panel are installed the valance snaps into the valance clips.

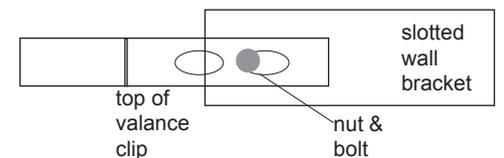

#### Outside Mount with Woven Wood Valance:

Install the wall brackets as stated above. Place the valance board on top of the bracket leaving 1/2" to 3/4" space between the wall and the back of the board. Flip the valance face over the top of the board. Use two 3/4" mounting screws at each bracket. Screw up from underneath the valance board.


The valance returns attach to the ends of the valance with velcro. Note: the valance return is slightly wider than the valance board.

Remove headrail endcap from only one end of the track. From the open end of the track, slide the carrier wheels into the track.

Be careful to ensure that the spacer chain has no kinks and that the chain connectors are on opposite sides of the ring on either side of the carrier wheel.



Once all the carriers are in the track, re-attach the headrail endcap. On the stack end of the track, tighten the "stop" screw in to place in the top of the headrail.

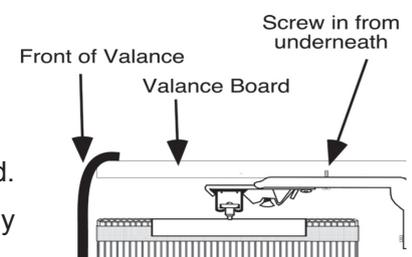

**Still have questions? Call our hotline at 1-800-726-3380**